




## Rexxer User Quick Reference Guide

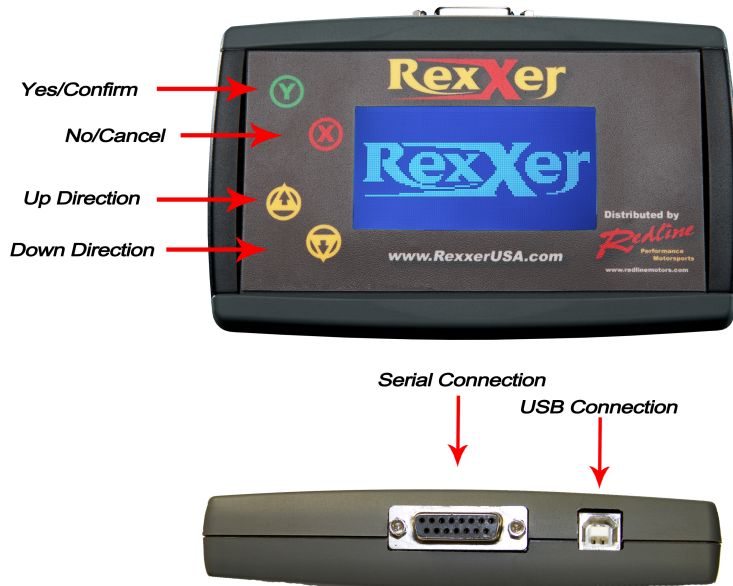






Rexxer ECU Tuning  
7331 George Washington Memorial Highway  
Yorktown VA, 23692  
[david@rexer.com](mailto:david@rexer.com)  
[www.rexxer.com](http://www.rexxer.com)



**Battery must be fully charged before operation!**

**Never have the Rexxer User connected to the Computer and Motorcycle simultaneously!**

### Steps:

- 1-  Connect the Rexxer User to the bike with provided cable.
- 2-  The Rexxer User will automatically power up.  
Follow the screen prompts
- 3-  The Rexxer User Reads and saves the stock map.  
If warning is shown, select (Green Y icon)
- 4-  The Rexxer User will write custom map from [ECU Form](#).
- 5-  Disconnect Rexxer Unit.

If O2 sensors were disabled, disconnect from the electrical connector(s).  
(They do not have to be removed from the exhaust.)

Features of Rexxer User as a Service Tool including TPS Resets, Adaptive Parameters, Trimmer, and CEL read/clear. Can be found in the User Guide